ASSEMBLY GUIDE FOR SERVICE MAST

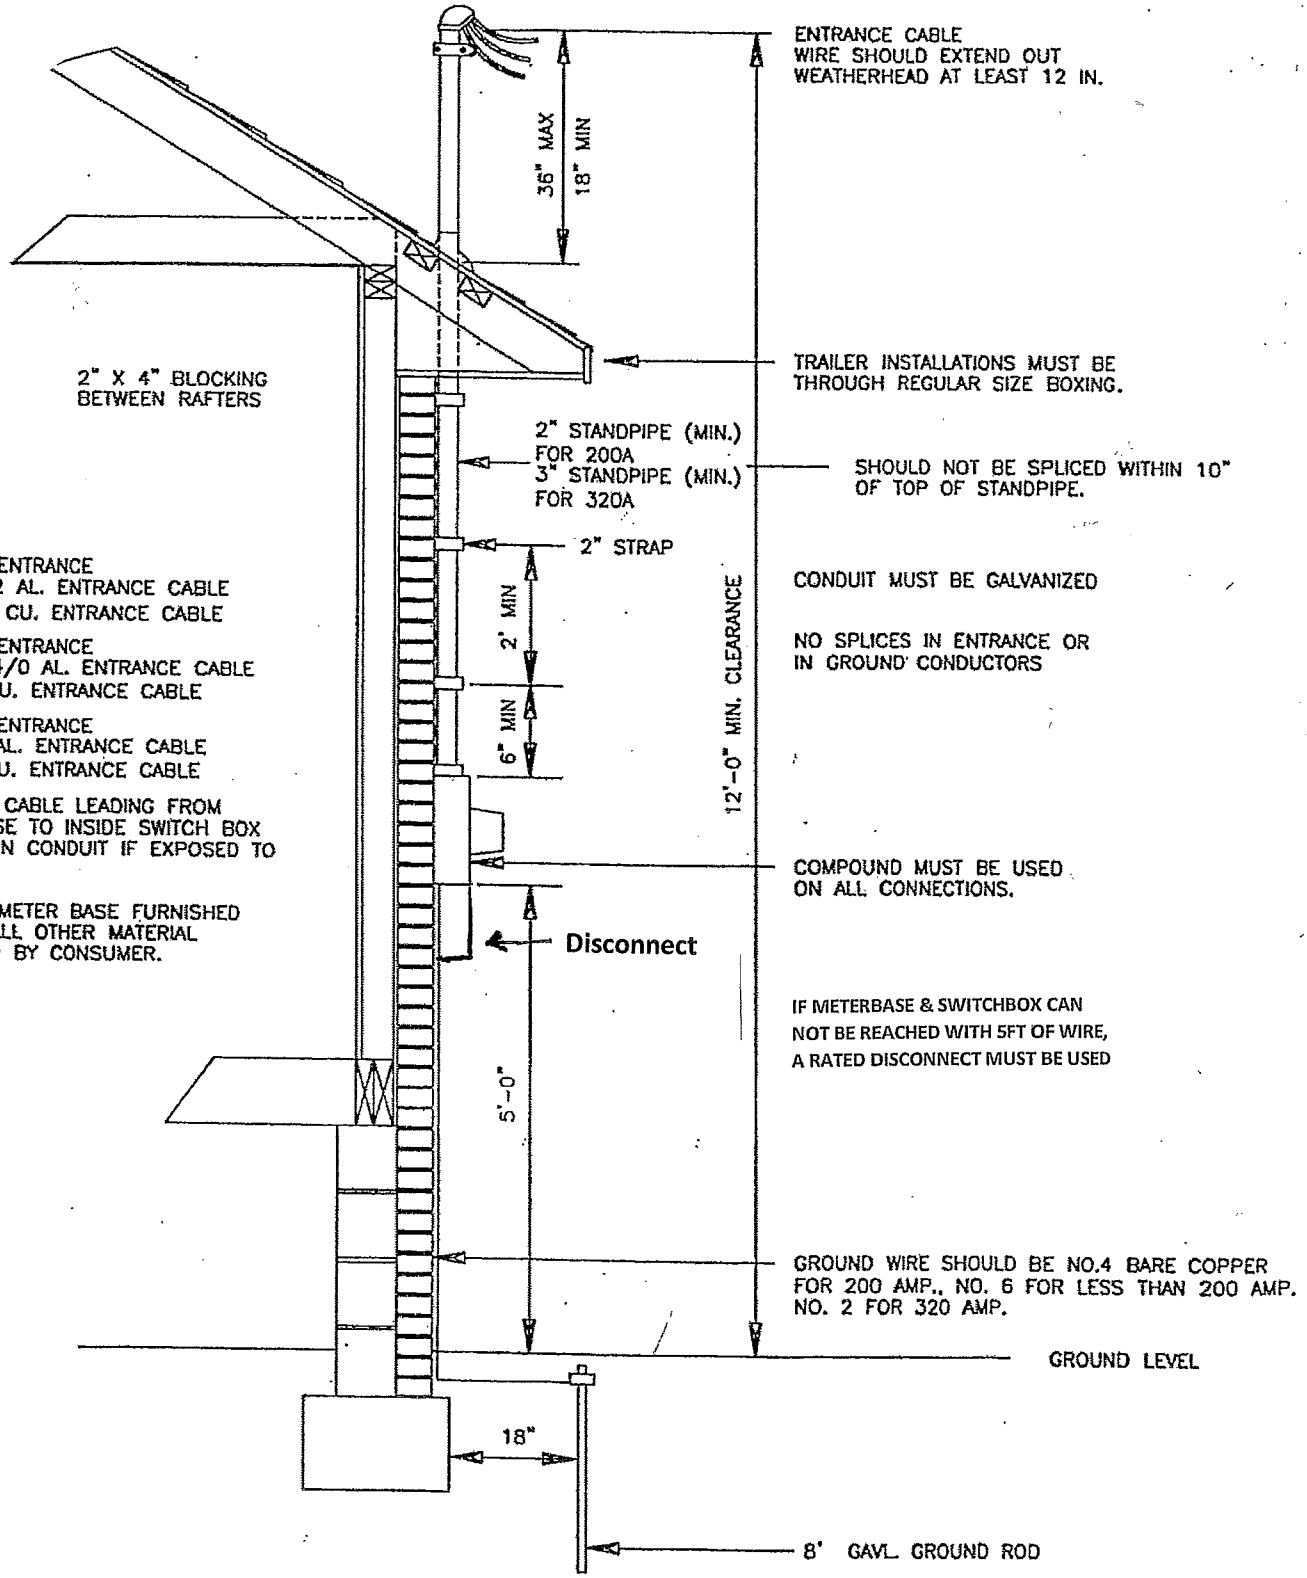

NOTE:

100 AMP ENTRANCE
USE NO. 2 AL. ENTRANCE CABLE
OR NO. 4 CU. ENTRANCE CABLE

200 AMP ENTRANCE
USE NO. 4/0 AL. ENTRANCE CABLE
OR 2/0 CU. ENTRANCE CABLE

320 AMP ENTRANCE
USE 350 AL. ENTRANCE CABLE
OR 250 CU. ENTRANCE CABLE

ENTRANCE CABLE LEADING FROM METER BASE TO INSIDE SWITCH BOX MUST BE IN CONDUIT IF EXPOSED TO OUTSIDE.

METER & METER BASE FURNISHED BY EMC. ALL OTHER MATERIAL FURNISHED BY CONSUMER.